

Eaton Contamination Control Products

FT1455-L2 Hand Held Launcher Operating Instructions



Powering Business Worldwide

Table of Contents

| | |
|--|----|
| General Information | 3 |
| Safety Instructions | 3 |
| Installation | 3 |
| Maintenance | 3 |
| Preparation | 3 |
| Operation | 5 |
| Nozzle and Projectile Selection Chart | 6 |
| Tube Sizing Chart - Nominal Inch | 7 |
| Recommended Sizing Chart - Metric tubing | 8 |
| Pipe Sizing Chart | 9 |
| Contact Information | 10 |

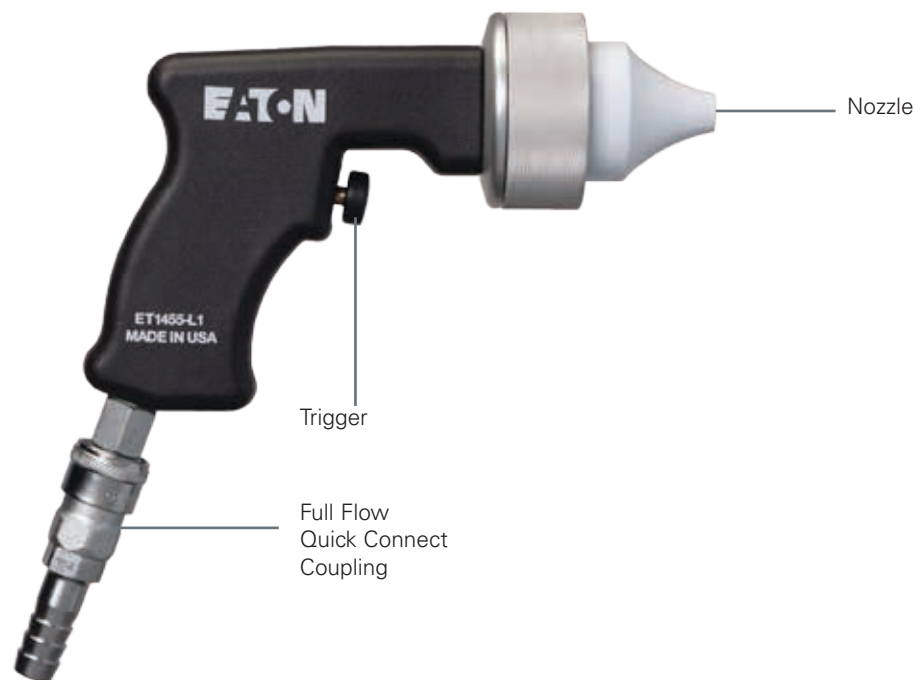


Figure 1

Capabilities

- Cleaning size range: 1/8" through 1-1/4"

Specifications

- Weight: 1.24 Pounds. (0.562kg).
- Pneumatic Requirements:
 - 1/2" NPT Air Line.
 - 80 PSI - 110 PSI (5.5 - 7.5 Bar) maximum.
 - Clean, dry, filtered air or inert gas source is required.
 - 5 micron filter and regulator with gauge are recommended.

General Information

The Eaton® FT1455-L2 Hand Held Launcher (Figure 1) was designed to shoot a projectile through hose and tube assemblies to strip out internal contamination such as rubber dust and metal particles from cutting processes, metal flash from crimping operations, and contaminated oil from hoses and tubes in hydraulic systems.

Eaton Hose Cleaning Systems reduce downtime, extends filter life and reduces the risk of failure and premature wear due to contamination.

The purpose of this manual is to present the basic operating and safety information for the Eaton FT1455-L2 Hand Held Projectile Launcher.

Safety Instructions



Read and understand the operator's manual before attempting to operate this unit. Failure to follow operating instructions could result in personal injury or property damage.



Prevent Unauthorized Operation: Do not permit anyone to operate this unit unless they have read and thoroughly understand this manual.



Wear Safety Glasses: Risk of eye injury! Eye protection is required at all times during the installation and operation of this unit. Failure to wear safety glasses could result in personal injury.



Keep work area clean. Cluttered areas and benches invite accidents.



Never point or fire the unit in the direction of any person.



Do not attempt to dislodge a projectile from the Hand Held Launcher when air supply is connected to the launcher.



Do not place any objects into the launching nozzle other than Eaton Projectiles.



Launcher and projectiles are only to be used for cleaning hose and tubes rated for at least 110 PSI

Installation

When installing the hand held projectile launcher make sure you have a filtered and regulated air or inert gas source.

Note: Never Use Oxygen. A 1/2" NPT regulator with gauge and a 5 micron air filter should be installed in the supply line to ensure clean dry air.

Maintenance

Visually inspect Hand Launcher for accumulation of particulate and oil from inlet air source. Clean as needed. Keep the hose assembly area clean to reduce recontamination of hose, tube and pipe assemblies.

Preparation

Step 1: Nozzle and projectile selection

Select nozzle and projectile from nozzle and projectile selection chart on pages 6, 7, 8 and 9.

Step 2: Nozzle installation

Push the top of the safety release bar forward to release the faceplate. (See Figure 2)



Figure 2

Install the required nozzle and adapter ring for application. The adapter ring if needed, snaps into the face plate first. (See Figure 3 & 4).



Figure 3



Figure 4

Step 3: Projectile Installation

Insert projectile into the nozzle, close faceplate and secure by pushing the safety release bar forward confirming the release bar locks into position. (See Figure 5, 6 & 7).



Figure 5



Figure 7

Step 4: Air source connection

Connect a 1/2" I.D. air hose using the supplied Full Flow Quick Connect Coupling to the back of the launchers' 5 micron air filter as shown. (See Figure 8).



Figure 6



Figure 8

Step 5: Operation

Place the hose, tube or pipe against the nozzle to insure a good air seal. Depress the trigger until the projectile exits the opposite end of the hose, tube or pipe you are cleaning. (See Figure 9).



Figure 9

Step 6: Inspection

Inspect projectile for contamination after firing through hose, tubing or pipe. Several projectiles may need to be fired to thoroughly remove contaminates. See Figure 10).



Figure 10

Nozzle and projectile selection chart

Recommendation for Hoses

Nominal diameter

| Inches | mm | Nozzle part # | Cleaning projectile part # | | |
|--------|-----|---------------|----------------------------|----|-------------|
| 3/16 | 05 | FT1455-N-H06 | FT1355-H-06 | | |
| ¼ | 06 | FT1455-N-H06 | FT1355-H-10 | or | FT1355-H-12 |
| 5/16 | 08 | FT1455-N-H08 | FT1355-H-12 | or | FT1355-H-14 |
| 3/8 | 10 | FT1455-N-H10 | FT1355-H-14 | or | FT1355-H-16 |
| ½ | 13 | FT1455-N-H13 | FT1355-H-18 | or | FT1355-H-20 |
| 5/8 | 16 | FT1455-N-H16 | FT1355-H-22 | | |
| ¾ | 19 | FT1455-N-H19 | FT1355-H-26 | | |
| 1 | 25 | FT1455-N-H25 | FT1355-H-33 | or | FT1355-H-36 |
| 1-1/4 | 32 | FT1455-N-H32 | FT1355-H-40 | or | FT1355-H-45 |
| 1-1/2 | 38 | FT1455-N-H38 | FT1355-H-50 | or | FT1355-H-55 |
| 2 | 50 | FT1455-N-H50 | FT1355-H-60 | or | FT1355-H-65 |
| 2-1/2 | 63 | FT1455-N-U55 | FT1355-H-75 | | |
| 3 | 76 | FT1455-N-U55 | FT1355-H-85 | | |
| 3-1/2 | 89 | FT1455-N-U55 | FT1355-H-100 | | |
| 4 | 102 | FT1455-N-45 | | | |
| 4-1/2 | 114 | FT1455-N-45 | | | |

Figure 11

Recommendations for projectiles for hose assemblies with JIC fittings

| JIC fitting dash Size | Nozzle part # | Cleaning projectile part # |
|-----------------------|---------------|----------------------------|
| -4 | FT1455-J-06 | FT1355-H-06 OR FT1355-H-07 |
| -6 | FT1455-J-10 | FT1355-H-12 |
| -8 | FT1455-J-13 | FT1355-H-16 |
| -10 | FT1455-J-16 | FT1355-H-22 |
| -12 | FT1455-J-19 | FT1355-H-26 |
| -16 | FT1455-J-25 | FT1355-H-33 |
| -20 | FT1455-J-32 | FT1355-H40 |
| -24 | FT1455-J-38 | FT1355-H-50 |
| -32 | FT1455-J-50 | FT1355-H-60 |

Figure 12

**Use larger recommended Eaton Projectiles when cutting hose with an abrasive wheel. The above sizes are recommendations. Due to different types of fittings, and the amount of contamination in the line, the size projectile may need to be adjusted.

Recommendations for hose assemblies with ORS fittings

| ORS fitting dash size | Nozzle part # | Cleaning projectile part # |
|-----------------------|---------------|----------------------------|
| -4 | FT1455-4FFORX | FT1355-H-06 OR FT1355-H-07 |
| -6 | FT1455-N-H06 | FT1355-H-12 |
| -8 | FT1455-N-H10 | FT1355-H-16 |
| -10 | FT1455-N-H13 | FT1355-H-22 |
| -12 | FT1455-N-H16 | FT1355-H-26 |
| -16 | FT1455-N-H19 | FT1355-H-33 |
| -20 | FT1455-N-H25 | FT1355-H-40 |

Figure 13

Recommendations for hose assemblies with code 61 or 62 flanges

| Code 61 or 62 flange dash size | Nozzle part # | Cleaning projectile part # |
|--------------------------------|---------------|----------------------------|
| -8 | FT1455-N-H10 | FT1355-H-16 |
| -10 | FT1455-N-H13 | FT1355-H-22 |
| -12 | FT1455-N-H16 | FT1355-H-26 |
| -16 | FT1455-N-H19 | FT1355-H-33 |
| -20 | FT1455-N-H25 | FT1355-H-40 |
| -24 | FT1455-N-H32 | FT1355-H-50 |
| -32 | FT1455-N-H38 | FT1355-H-60 |

Figure 14

Tube sizing chart - nominal inch

Recommended nozzles and cleaning projectiles for tubes (inch)

| Outside diameter x wall thickness | Nozzle part # | Cleaning projectile part # | Abrasive projectile part # | Tube projectile part # |
|-----------------------------------|---------------|----------------------------|----------------------------|------------------------|
| 1/8" X .030" | FT1455-NT-03 | - | - | - |
| 1/4" X .035" | FT1455-NT-06 | FT1355-H-10 | FT1355-A-07 | FT1355-T-06 |
| 1/4" X .049" | FT1455-NT-06 | FT1355-H-08 | FT1355-A-07 | FT1355-T-06 |
| 1/4" X .065" | FT1455-NT-06 | FT1355-H-07 | - | FT1355-T-06 |
| 5/16" X .035" | FT1455-NT-08 | FT1355-H-12 | FT1355-A-10 | FT1355-T-07 |
| 3/8" X .035"-.049" | FT1455-NT-10 | FT1355-H-14 | FT1355-A-12 | FT1355-T-10 |
| 3/8" X .065" | FT1455-NT-10 | FT1355-H-12 | FT1355-A-10 | FT1355-T-10 |
| 1/2" X .035" | FT1455-J-13 | FT1355-H-16 | FT1355-A-16 | FT1355-T-14 |
| 1/2" X .049" | FT1455-J-13 | FT1355-H-16 | FT1355-A-16 | FT1355-T-12 |
| 1/2" X .065" | FT1455-J-13 | FT1355-H-16 | FT1355-A-14 | FT1355-T-12 |
| 1/2" X .083" | FT1455-J-13 | FT1355-H-14 | FT1355-A-12 | FT1355-T-12 |
| 5/8" X .049" | FT1455-J-16 | FT1355-H-22 | FT1355-A-20 | FT1355-T-16 |
| 5/8" X .065" | FT1455-J-16 | FT1355-H-20 | FT1355-A-18 | FT1355-T-16 |
| 5/8" X .083" | FT1455-J-16 | FT1355-H-20 | FT1355-A-18 | FT1355-T-14 |
| 3/4" X .049"-.065" | FT1455-J-19 | FT1355-H-26 | FT1355-A-24 | FT1355-T-20 |
| 3/4" X .095" | FT1455-J-19 | FT1355-H-22 | FT1355-A-20 | FT1355-T-18 |
| 7/8" X .049" | FT1455-J-25 | FT1355-H-33 | FT1355-A-30 | FT1355-T-26 |
| 7/8" X .065" | FT1455-J-25 | FT1355-H-30 | FT1355-A-28 | FT1355-T-22 |
| 7/8" X .095" | FT1455-N-H16 | FT1355-H-28 | FT1355-A-26 | FT1355-T-22 |
| 1" X .065" | FT1455-J-32 | FT1355-H-33 | FT1355-A-30 | FT1355-T-28 |
| 1" X .083"-.095" | FT1455-J-32 | FT1355-H-33 | FT1355-A-30 | FT1355-T-26 |
| 1" X .120" | FT1455-J-32 | FT1355-H-30 | FT1355-A-28 | FT1355-T-26 |
| 1-1/4" X .065" | FT1455-NT-32 | FT1355-H-40 | FT1355-A-40 | FT1355-T-33 |
| 1-1/4" X .083" | FT1455-NT-32 | FT1355-H-40 | FT1355-A-36 | FT1355-T-33 |
| 1-1/4" X .095" | FT1455-NT-32 | FT1355-H-40 | FT1355-A-36 | FT1355-T-33 |
| 1-1/4" X .109" | FT1455-NT-32 | FT1355-H-36 | FT1355-A-36 | FT1355-T-33 |
| 1-1/4" X .120" | FT1455-NT-32 | FT1355-H-36 | FT1355-A-33 | FT1355-T-33 |
| 1-1/2" X .065"-.120" | FT1455-J-38 | FT1355-H-50 | FT1355-A-45 | FT1355-T-40 |
| 1-1/2" X .134"-.148" | FT1455-J-38 | FT1355-H-45 | FT1355-A-40 | FT1355-T-40 |
| 2" X .065"-.120" | FT1455-J-50 | FT1355-H-60 | FT1355-A-55 | FT1355-T-50 |
| 2" X .134"-.188" | FT1455-J-50 | FT1355-H-55 | FT1355-A-50 | FT1355-T-50 |
| 1-1/2" X .134"-.148" | FT1455-J-38 | FT1355-H-45 | FT1355-A-40 | FT1355-T-40 |
| 2" X .065"-.120" | FT1455-J-50 | FT1355-H-60 | FT1355-A-55 | FT1355-T-50 |
| 2" X .134"-.188" | FT1455-J-50 | FT1355-H-55 | FT1355-A-50 | FT1355-T-50 |

Figure 15

Tubing must be deburred prior to firing projectiles. Depending on the type of contamination present in the tube, abrasive projectiles may be used to remove rust and scale. Always use an Eaton projectile after the use of an abrasive projectile. Tube projectiles should be used to remove mandrel lubricants, grease and oil.

Recommended sizing chart - Metric tubing

| Outside diameter x wall thickness | Nozzle part # | Cleaning projectile part # | Abrasive projectile part # | Tube projectile part # | Outside diameter x wall thickness | Nozzle part # | Cleaning projectile part # | Abrasive projectile part # | Tube projectile part # |
|-----------------------------------|------------------|----------------------------|----------------------------|------------------------|-----------------------------------|------------------|----------------------------|----------------------------|------------------------|
| 6 X 1.0 | FT1455-NT-06x1.5 | FT1355-H-07 | FT1355-A-06 | FT1355-T-06 | 20 X3 | FT1455-NT-20x3.0 | FT1355-H-22 | FT1355-A-20 | FT1355-T-18 |
| 6 X 1.5 | FT1455-NT-06x1.5 | FT1355-H-07 | FT1355-A-06 | #N/A | 22 X1 | FT1455-NT-22x2.0 | FT1355-H-30 | FT1355-A-28 | FT1355-T-26 |
| 8 X 1.0 | FT1455-NT-08x1.5 | FT1355-H-10 | FT1355-A-07 | FT1355-T-07 | 22 X1.5 | FT1455-NT-22x2.0 | FT1355-H-30 | FT1355-A-28 | FT1355-T-26 |
| 8 X 1.5 | FT1455-NT-08x1.5 | FT1355-H-10 | FT1355-A-07 | FT1355-T-07 | 22 X2 | FT1455-NT-22x2.0 | FT1355-H-30 | FT1355-A-28 | FT1355-T-26 |
| 10 X 1.0 | FT1455-NT-10x1.5 | FT1355-H-14 | FT1355-A-12 | FT1355-T-12 | 25 X2 | FT1455-NT-25x3.0 | FT1355-H-33 | FT1355-A-30 | FT1355-T-28 |
| 10 X 1.5 | FT1455-NT-10x1.5 | FT1355-H-14 | FT1355-A-12 | FT1355-T-12 | 25 X2.5 | FT1455-NT-25x3.0 | FT1355-H-30 | FT1355-A-28 | FT1355-T-26 |
| 12 X 1.0 | FT1455-NT-12x2.0 | FT1355-H-16 | FT1355-A-14 | FT1355-T-14 | 25 X3 | FT1455-NT-25x3.0 | FT1355-H-30 | FT1355-A-28 | FT1355-T-26 |
| 12 X 1.5 | FT1455-NT-12x2.0 | FT1355-H-16 | FT1355-A-14 | FT1355-T-14 | 28 X2 | FT1455-NT-28x2.5 | FT1355-H-36 | FT1355-A-33 | FT1355-T-33 |
| 12 X 2.0 | FT1455-NT-12x2.0 | FT1355-H-14 | FT1355-A-12 | FT1355-T-12 | 28 X2.5 | FT1455-NT-28x2.5 | FT1355-H-36 | FT1355-A-33 | FT1355-T-30 |
| 14 X 1.0 | FT1455-NT-14x2.0 | FT1355-H-18 | FT1355-A-16 | FT1355-T-16 | 30 X2 | FT1455-NT-30x4.0 | FT1355-H-36 | FT1355-A-33 | FT1355-T-33 |
| 14 X 1.5 | FT1455-NT-14x2.0 | FT1355-H-16 | FT1355-A-14 | FT1355-T-14 | 30 X2.5 | FT1455-NT-30x4.0 | FT1355-H-36 | FT1355-A-33 | FT1355-T-30 |
| 14 X 2.0 | FT1455-NT-14x2.0 | FT1355-H-16 | FT1355-A-14 | FT1355-T-14 | 30 X3 | FT1455-NT-30x4.0 | FT1355-H-36 | FT1355-A-33 | FT1355-T-30 |
| 15 X 1.0 | FT1455-NT-15x2.0 | FT1355-H-20 | FT1355-A-18 | FT1355-T-16 | 30 X4 | FT1455-NT-30x4.0 | FT1355-H-36 | FT1355-A-33 | FT1355-T-30 |
| 15 X 1.5 | FT1455-NT-15x2.0 | FT1355-H-18 | FT1355-A-16 | FT1355-T-16 | 35 X2 | FT1455-NT-35x3.0 | FT1355-H-45 | FT1355-A-40 | FT1355-T-40 |
| 15 X 2.0 | FT1455-NT-15x2.0 | FT1355-H-16 | FT1355-A-14 | FT1355-T-14 | 35 X3 | FT1455-NT-35x3.0 | FT1355-H-40 | FT1355-A-36 | FT1355-T-36 |
| 16 X 1.0 | FT1455-NT-16x2.5 | FT1355-H-22 | FT1355-A-20 | FT1355-T-18 | 35 X4 | FT1455-N-H25 | FT1355-H-40 | FT1355-A-36 | FT1355-T-33 |
| 16 X 1.5 | FT1455-NT-16x2.5 | FT1355-H-20 | FT1355-A-18 | FT1355-T-16 | 35 X5 | FT1455-N-H25 | FT1355-H-36 | FT1355-A-33 | FT1355-T-30 |
| 16 X 2.0 | FT1455-NT-16x2.5 | FT1355-H-18 | FT1355-A-16 | FT1355-T-16 | 38 X2.5 | FT1455-NT-38x5.0 | FT1355-H-50 | FT1355-A-45 | FT1355-T-40 |
| 16 X 2.5 | FT1455-NT-16x2.5 | FT1355-H-16 | FT1355-A-14 | FT1355-T-14 | 38 X3 | FT1455-NT-38x5.0 | FT1355-H-50 | FT1355-A-45 | FT1355-T-40 |
| 18 X 1.0 | FT1455-NT-18x2.5 | FT1355-H-24 | FT1355-A-22 | FT1355-T-20 | 38 X4 | FT1455-NT-38x5.0 | FT1355-H-45 | FT1355-A-40 | FT1355-T-40 |
| 18 X 1.5 | FT1455-NT-18x2.5 | FT1355-H-24 | FT1355-A-20 | FT1355-T-18 | 38 X5 | FT1455-NT-38x5.0 | FT1355-H-40 | FT1355-A-36 | FT1355-T-36 |
| 18 X 2.0 | FT1455-NT-18x2.5 | FT1355-H-22 | FT1355-A-20 | FT1355-T-18 | 42 X2 | FT1455-NT-42x3.0 | FT1355-H-55 | FT1355-A-50 | FT1355-T-50 |
| 18 X 2.5 | FT1455-NT-18x2.5 | FT1355-H-20 | FT1355-A-18 | FT1355-T-16 | 42 X3 | FT1455-NT-42x3.0 | FT1355-H-50 | FT1355-A-50 | FT1355-T-45 |
| 20 X 1.5 | FT1455-NT-20x3.0 | FT1355-H-26 | FT1355-A-24 | FT1355-T-22 | 50 X3 | FT1455-NT-50x5.0 | FT1355-H-60 | FT1355-A-55 | FT1355-T-55 |
| 20 X 2.0 | FT1455-NT-20x3.0 | FT1355-H-24 | FT1355-A-22 | FT1355-T-20 | 50 X5 | FT1455-NT-50x5.0 | FT1355-H-55 | FT1355-A-55 | FT1355-T-50 |
| 20 X2.5 | FT1455-NT-20x3.0 | FT1355-H-24 | FT1355-A-20 | FT1355-T-18 | 50 X6 | FT1455-NT-50x5.0 | FT1355-H-55 | FT1355-A-50 | FT1355-T-50 |

Figure 16

Tubing must be deburred prior to firing projectiles. Depending on the type of contamination present in the tube, abrasive projectiles may be used to remove rust and scale. Always use an Eaton projectile after the use of an abrasive projectile.

Pipe sizing chart

Recommended nozzles and cleaning projectiles for pipes (inch)

| SCH 40 | Nozzle part # | Cleaning projectile part # | Abrasive projectile part # |
|--------|---------------|----------------------------|----------------------------|
| 1/4" | FT1455-N-H08 | FT1355-H-14 | FT1355-A-12 |
| 3/8" | FT1455-N-H13 | FT1355-H-18 | FT1355-A-16 |
| 1/2" | FT1455-N-H16 | FT1355-H-20 | FT1355-A-18 |
| 3/4" | FT1455-N-H19 | FT1355-H-30 | FT1355-A-26 |
| 1" | FT1455-N-H25 | FT1355-H-36 | FT1355-A-33 |
| 1-1/4" | FT1455-N-H32 | FT1355-H-45 | FT1355-A-40 |
| 1-1/2" | FT1455-N-H38 | FT1355-H-55 | FT1355-A-50 |
| 2" | FT1455-N-H50 | FT1355-H-65 | - |
| 2-1/2" | FT1455-N-U55 | FT1355-H-75 | - |
| 3" | FT1455-N-U55 | FT1355-H-85 | - |
| 3-1/2" | FT1455-N-U55 | FT1355-H-100 | - |

| SCH 80 | Nozzle part # | Cleaning projectile part # | Abrasive projectile part # |
|--------|-----------------|----------------------------|----------------------------|
| 1/4" | FT1455-N-H06 | FT1355-H-12 | FT1355-A-10 |
| 3/8" | FT1455-N-H10 | FT1355-H-16 | FT1355-A-14 |
| 1/2" | FT1455-N-H13 | FT1355-H-20 | FT1355-A-16 or FT1355-A-18 |
| 3/4" | FT1455-N-H19 | FT1355-H-26 | FT1355-A-22 |
| 1" | FT1455-N-H25 | FT1355-H-36 | FT1355-A-30 |
| 1-1/4" | FT1455-N-H32 | FT1355-H-45 | FT1355-A-40 |
| 1-1/2" | FT1455-N-H38 | FT1355-H-50 | FT1355-A-45 |
| 2" | FT1455-N-H38 | FT1355-H-60 | FT1355-A-55 |
| 2-1/2" | FT1455-N-H50 | FT1355-H-70 | - |
| 3" | FT1455-N-U55 | FT1355-H-85 | - |
| 3-1/2" | FT1455-N-U55/90 | FT1355-H-110 | FT1355-A-110 |
| 4" | FT1455-N-4.5LN | FT1355-H-115 | FT1355-A-110 |

| SCH 160 | Nozzle part # | Cleaning projectile part # | Abrasive projectile part # |
|---------|---------------|----------------------------|----------------------------|
| 1/2" | FT1455-N-H10 | FT1355-H-16 | FT1355-A-14 |
| 3/4" | FT1455-N-H16 | FT1355-H-20 | FT1355-A-18 |
| 1" | FT1455-N-H19 | FT1355-H-30 | FT1355-A-26 |
| 1-1/4" | FT1455-N-H25 | FT1355-H-36 | FT1355-A-33 |
| 1-1/2" | FT1455-N-H32 | FT1355-H-45 | FT1355-A-40 |
| 2" | FT1455-N-H38 | FT1355-H-55 | FT1355-A-45 or FT1355-A-50 |
| 2-1/2" | FT1455-N-H50 | FT1355-H-65 | FT1355-A-60 |
| 3" | FT1455-N-U55 | FT1355-H-75 | |
| 4" | FT1455-N-U55 | FT1355-H-100 | |

Figure 17

Abrasive projectiles may be used when there is a build-up of contamination, surface rust or scale. For pipe applications where there is a greater build-up of contamination, surface rust or scale, use a grinding projectile. Pipe must be straight for this projectile.

NOTE: To ensure cleanliness, an Eaton projectile must be used after abrasive and grinding projectiles. Please call if you need help in sizing your application for the correct nozzles and projectiles.

Eaton
Hydraulics Business USA
14615 Lone Oak Road
Eden Prairie, MN 55344
USA
Tel: 952-937-9800
Fax: 952-294-7722
www.eaton.com/hydraulics

Eaton
Hydraulics Business Europe
Route de la Longeraie 7
1110 Morges
Switzerland
Tel: +41 (0) 21 811 4600
Fax: +41 (0) 21 811 4601

Eaton
Hydraulics Group Asia Pacific
Eaton Building
No.7 Lane 280 Linhong Road
Changning District,
Shanghai 200335 China
Tel: (+86 21) 5200 0099
Fax: (+86 21) 2230 7240

